

ACS R/RP

Bennett EIC 5000 connection

Connecting the ACS R/RP to a Bennett EIC 5000 trim system

The terminals 3,4,5,6 are connected directly to the pump. The original control panel and “black box” have to be removed. After installation, please verify the control direction according to instructions in the user’s manual.

