


INSTALLATION TEMPLATE

**Print at 100% scale, confirm with provided dimension.*

- (A) BOLT UP FROM FLOOR, ¼ - 20, DRILL ⅝" (8mm)
- (B) SCREW DOWN INTO FLOOR, #12, DRILL 3/16" (4.8mm)
- (C) TRIPOD MOUNT: ¼ - 20 MOUNTING STUD
- (D) CABLE, DRILL ¾" (19mm) MAX

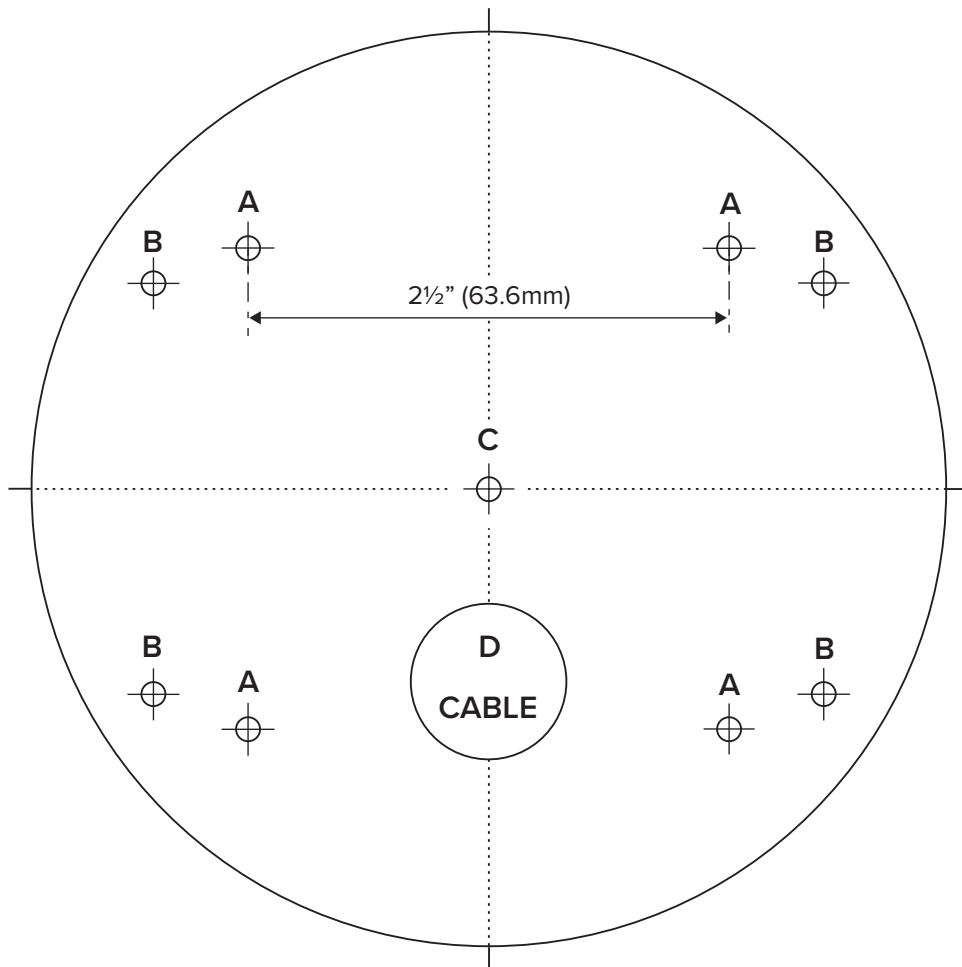

Before Installation:

Refer to your Multi-Function-Display (MFD) installation guide to see if any additional equipment is needed for network and power requirements.


For Example:

A PoE isolation coupler is required on some Garmin MFDs (Fig. A: Garmin part number 010-10580-10).


Before Operation:

Ensure blue protective film (Fig. B) is removed from the lens face at the front of the camera.

(A)

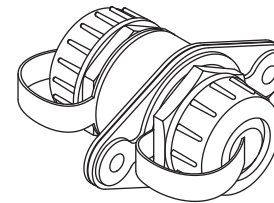

(B)

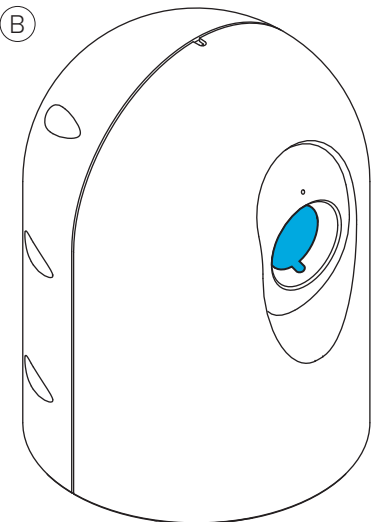

**Graphics shown are not to scale.*